

## SkyTracker Pro Counterweight Package (#3324) Installation

A SkyTracker Pro counterweight package consists of a 1.35kg CW, a CW shaft w/Safety Lock, a dovetail bar, a mounting screw and a lever, packaged in a nicely cut foam..



Remove the black ball head mounting block from the SkyTracker Pro.



Remove the brass ball head mounting stud. Insert the mounting screw from inside of the mounting block. Use a coin to tighten the mounting screw.




Put the dovetail bar on top of the mounting block, with wide side facing down and mounting screw going through the center hole.



Put the lever on to the mounting screw. Turn and tighten the lever to secure the dovetail bar on the mounting block.



You can push down the center button and turn the lever without loosening the mounting screw. So you can put lever arm at any place you want.

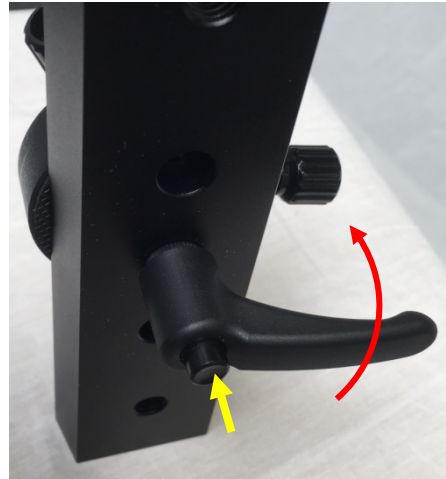

Install the mounting block back to the SkyTracker Pro and lock it. Install the CW shaft and CW, with larger bore facing to the safety lock.



Install the ball head and camera. Retreat the Polar scope. Loosen the lever a little so the dovetail bar can rotate free. Balance the payload. Secure the lever again.