

Pegasus Ultimate Power Box v2 dovetail brackets installation

The package includes the following items.

- 2 x identical dovetail brackets for UPBv2
- 2 x M4 Allen bolts
- 4 x M4 spacers
- 2 x M4 nuts
- 4 x M3.5 philips head screws
- 4 x M3 Allen Bolts



Step 1
Check which version of enclosure you have and use the appropriate screws.

Untie the two (2) lower stock screws on each side, displayed by the black arrows (keep them in safe place as you don't need them anymore). Use the M3.5 screws to attach the brackets on the UPB.

old enclosure



Use the M3 bolts into the available threads pointed with arrows to attach the brackets on the UPB.


new enclosure



Step 2
Place the adapters on each side and use the appropriate screws to securely lock them.



Step 3
You can now mount the whole setup into the dovetail using the M4 bolts, spacers and nuts.

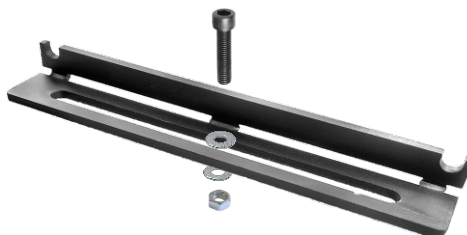

You are ready to go...